
# Holman

## Installation Guide 4081L

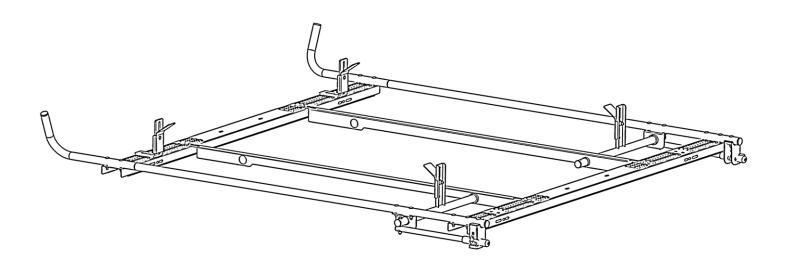

Available at Contractor's Solutions: www.Contractors-Solutions.net

Holman Rancho Cordova, CA 95742 800-343-7486

InstallationSupport@Holman.com

20230830R5 DATE:



### PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

#### **Warning**



Always check for wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

#### **Tools Needed**

1/2" Wrench and Socket	9/16" Wrench and Socket
------------------------	-------------------------

#### **Table of Contents**

Before You Begin	1
Parts List	2
Hardware	3
Step 1 — Remove Ladder End Stops	4
Step 2 – Install Side Tube	4
Step 3 – Install Hanger Bracket	5
Step 4 – Attach Clamp Tube and L-bracket	6
Step 5 – Mount Handle	8
Step 6 – Mount Latch Assembly	9
Step 7 – Install Ladder Hook to Bow	9
Angle Pad Orientations and Locations	11
Clamp Mechanism Orientation and Angled Pad Positions	11
Examples of Ladder Clamps Firmly Against Ladder Rungs	11

#### **Before You Begin**

- Read all instructions prior to assembling or installing any Holman product.
- Have vehicle specific mount kit installed on vehicle.
- Most times it is easier to assemble on top of the roof, after the mount kit has been installed.
- DO NOT EXCEED MANUFACTURERS WEIGHT CAPACITY FOR ROOF.
- Be sure to adjust ladder clamps accordingly to secure ladder firmly to rack.
  To adjust, refer to Clamp and Lock adjustment guide.



#### **Parts List**

ITEM	PART NUMBER	DESCRIPTION	QTY
NO.	11-03005	Long Angle L-Bracket	1
В	40800-51 🗘	Tube	1
С	40800-52-L	J-Tube	1
D	11-03027	Angle Brkt	1
E	13-03007	Rotating Clamp	1
F	40813-44	Latch Assembly	1
G	13-03008	Handle	1
н	13-03009	Ladder Stop	1
	18-4081L	Hardware Kit	1




**Hardware** 

narov		2422410	Dec Coverious	A*V
ITEM	HARDWARE TO SCALE	PART NO.	DESCRIPTION	QTY.
,		90295A170	3/8" Nylon Washer	1
2		95615A140	3/8"-16 Nyloc Nut	5
3		90126A031	3/8" Flat Washer	5
4		90185A624	3/8"-16 x 1" Carriage Bolt	4
5		90185A591	5/16"-18 x 2" Carriage Bolt	7
6		.312 FLAT WASHER	5/16 Flat Washer	7
7		95615A160	5/16"-18 Nyloc Nut	7
8		91247A636	3/8"-16 x 3" Hex Head	1
9		40800-10-007	PLASTIC BUSHING Scale 1:2	2
10		91844A370	3/8" Contour Washer	1
11		60ml Sealant	Sealant	1




#### <u>Step 1 — Remove Ladder End Stops</u>

• If haven't already done so, remove ladder stops from the opposite end of both bows where the existing ladder rack is installed.

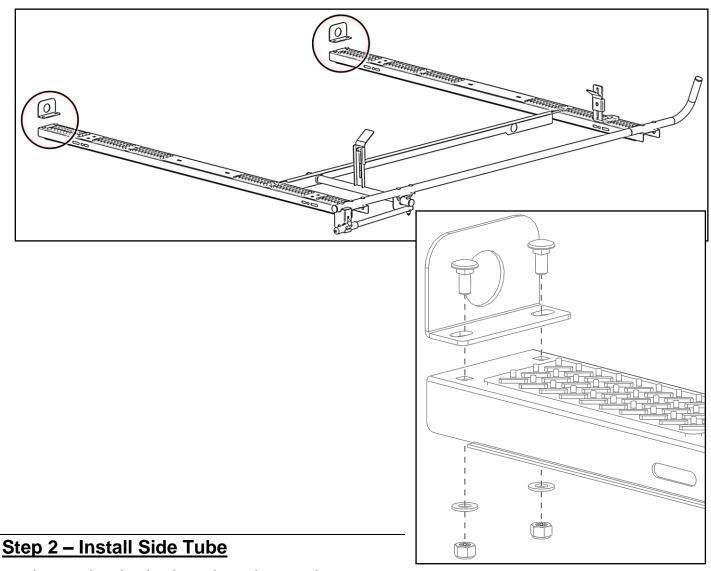


- Insert the J-tube into the tube as shown.
- Place sealant along the swage joint.

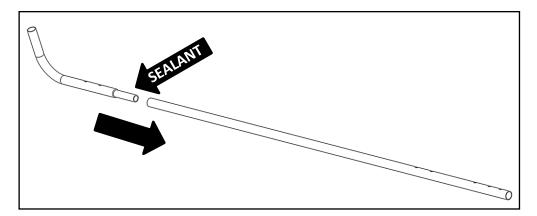




- Place J-tube assembly on top of the installed bows. Be sure the J-Tube is oriented with hook towards front and outside of vehicle.
- Leave one square slot open at the rear of the tube.

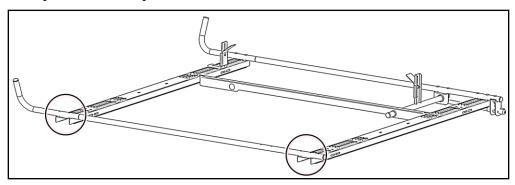


 Mount the tube assembly to the bows using 5/16" x 2" carriage bolts, 5/16" flat washers and 5/16" lock nuts.

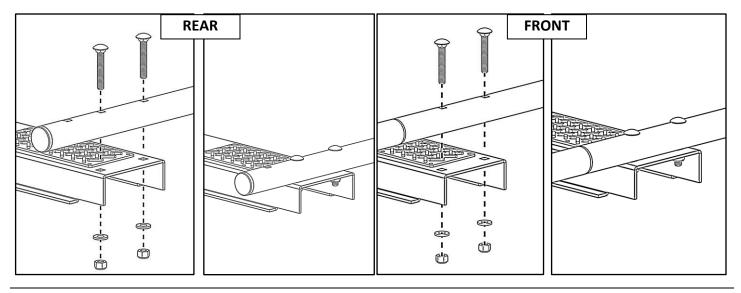

#### Step 3 - Install Hanger Bracket


 Mount the angle bracket to the underside of the tube assembly in the orientation shown using 5/16" x 2" carriage bolts, 5/16" flat washers and 5/16" lock nuts. Be sure to have the angle bracket offset to the center of the vehicle.

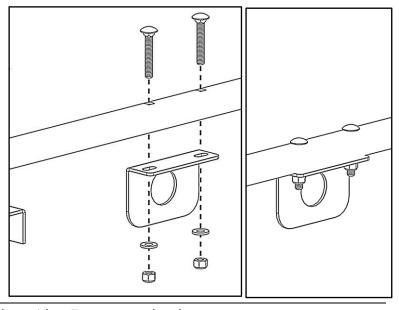





#### Step 4 - Attach Clamp Tube and L-bracket

• Place the plastic bushings on the rotating clamp in the orientation shown. **Be sure** to have the long flange of the L bracket to the center of the vehicle.

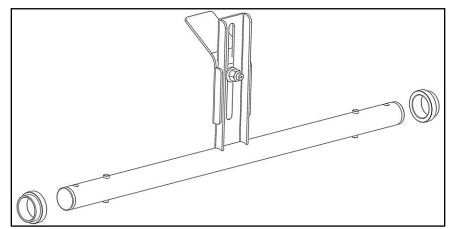


- Place the long angle bracket on top of the bows as shown. Have the bend offset to the center of the vehicle.
- Insert the bushings into the long angle bracket and the angle bracket. Be sure to install the bushings in an orientation so they CANNOT fall out.

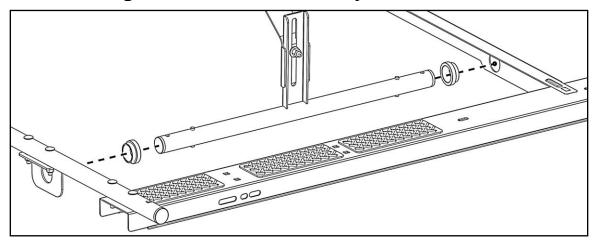


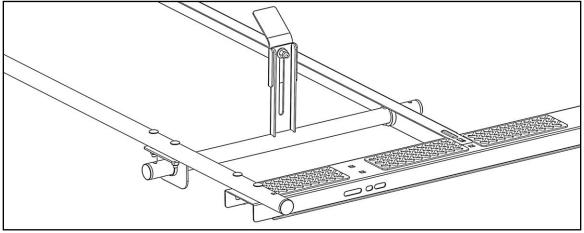




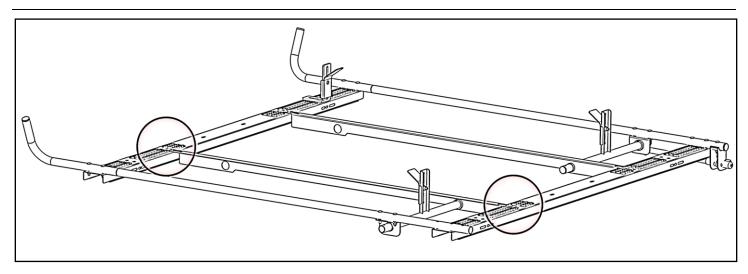

 Attach the long L-bracket to both bows in the orientation shown using 3/8" x 1" carriage bolts, 3/8" flat washers and 3/8" lock nuts.

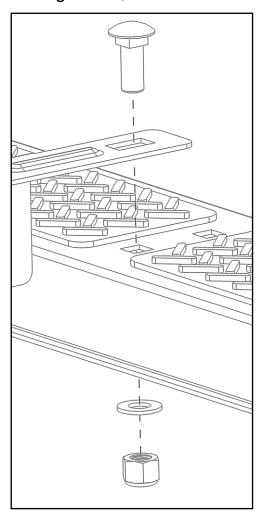


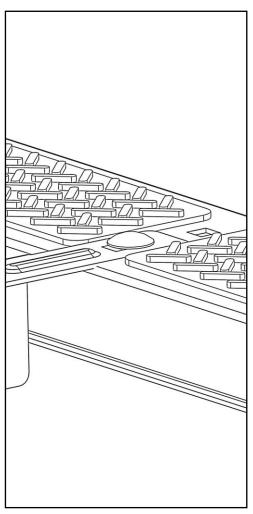



#### **Step 5 – Mount Handle**


- Bolt the handle to the rotating clamp in the order shown using a 3/8" x 3" hex head, a 3/8" flat washer, 3/8" nylon washer, 3/8" contour washer and a 3/8" lock nut. The nylon washer goes in between the rotating clamp and the handle. The contour washer goes against the handle.
- DO NOT overtighten. Handle should rotate freely.

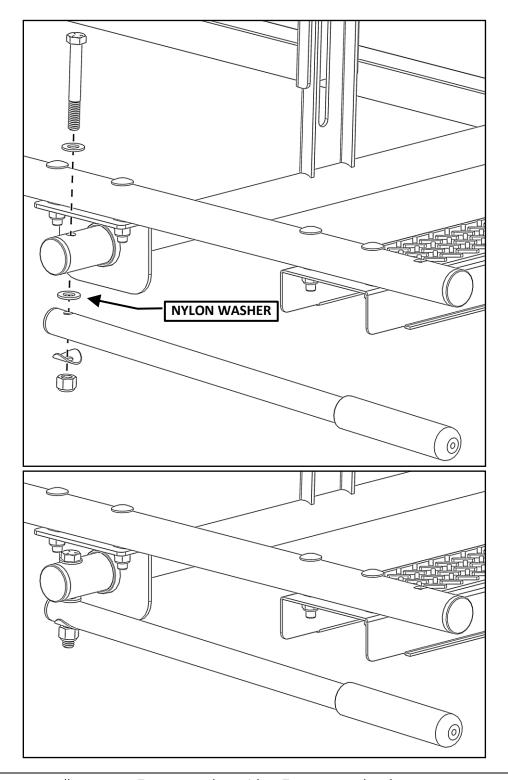




#### **Step 6 - Mount Latch Assembly**

• Attach the latch assembly to the rear most square hole in the tube using 5/16" x 2" carriage bolt, 5/16" flat washer and 5/16" lock nut.

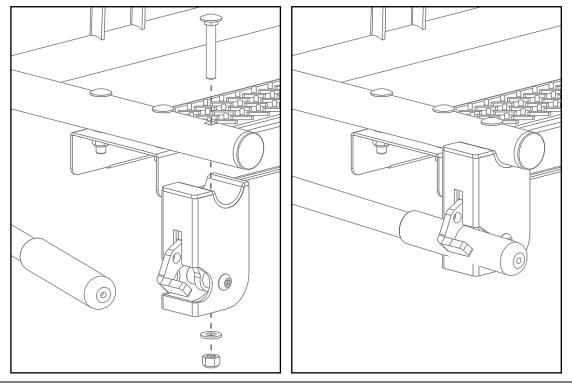

#### Step 7 - Install Ladder Hook to Bow

- Bolt the ladder hook bracket to the front bow in the orientation shown using two 3/8" x 1" carriage bolts, two 3/8" flat washers and two 3/8" lock nuts.
- TIGHTEN.
- Adjust ladder hooks to fit ladder.

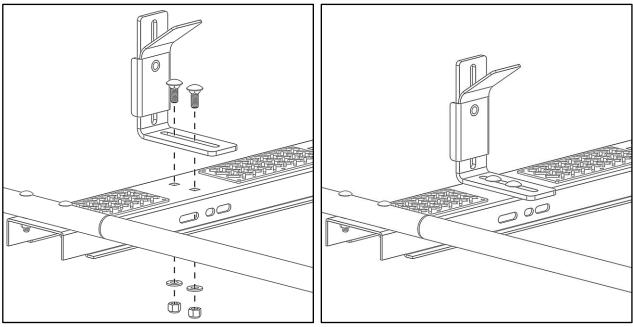




#### **GO BACK AND ENSURE ALL HARDWARE IS TIGHT.**

#### YOUR INSTALLATION IS NOW COMPLETE.


Refer to the Clamp and Lock Adjustment instructions to adjust the rack to your ladder.

## ALWAYS BE SURE LADDER IS SECURE PRIOR TO TRANSPORTATION.

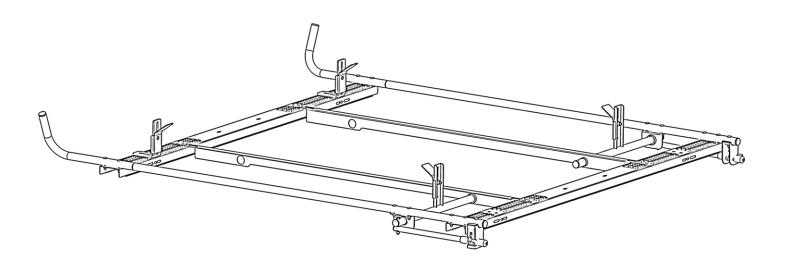




#### **Angle Pad Orientations and Locations**

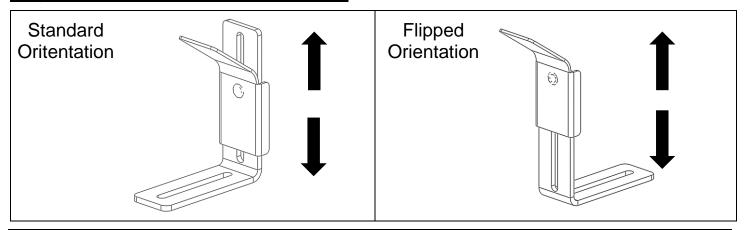



#### **Clamp Mechanism Orientation and Angled Pad Positions**

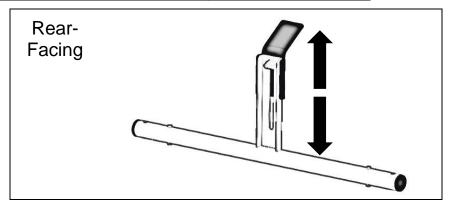

#### **Examples of Ladder Clamps Firmly Against Ladder Rungs**

• Be sure to position the ladder hook in a way so the hook clamps the ladder tight into place. A tight fit ensures the ladder cannot fall off the rack.

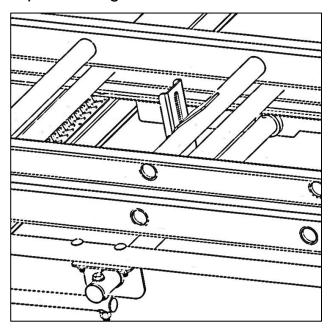

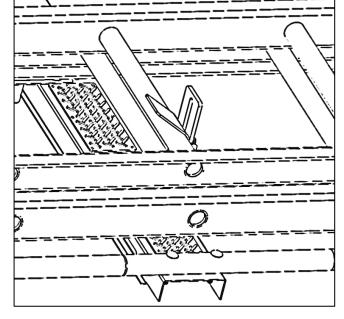

BE SURE THE LADDER HOOKS ARE FIRMLY AGAINST THE LADDER STEPS OR RUNGS.